

TCY-MT-U Intelligent temperature PID controller

Features

- Temperature PID control for HVAC systems.
- Up to 2 modulating outputs for DC 0...10V with 10mV resolution.
- 1 internal temperature sensor and up to 2 external sensor inputs
- Multiple remote control functions on external input
- Password protected programmable user and control parameters
- Blue backlight

Applications

- Various temperature control applications
- Stand alone VAV control for pressure independent actuators
- Water Only Systems: Radiator, floor heating or chilled ceilings
- Individual room control for offices, residential, hotel rooms, meeting rooms, etc.

General description

The TCY-MT-U is a stand-alone electronic universal controller with one temperature control loop. It may use up to 2 PID sequences. The TCY-MT-U features 1 internal NTC temperature sensor, one external sensor, one binary input and one analog output. The configuration has been reduced to a minimum to allow for a simple and off the shelf usage. For more advanced features and current in- and outputs the TCI product range is recommended. The TCY-MT-U can be configured using the standard operation terminal. No special tool or software is required.

TCY-MT2-U

| | |
|-------------------|--|
| Housing: | U = Vertical (2" x 4") housing, Standard is square housing |
| Function: | 2 = 2-pipe, 4 = 4-pipe |
| Input: | T = Temperature |
| Output: | B = Binary |
| Series Indication | TCY |

| Item Name | Item code | Variant | Features |
|---------------|---------------|---------------|--|
| TCY-MT2-U-W01 | 40-10 0044-01 | Cooling only | Compact PID controller with: 2 TI, 1 AO |
| TCY-MT2-U-W02 | 40-10 0044-02 | Heating only | |
| TCY-MT2-U | 40-10 0044 | 2-Pipe system | |
| TCY-MT4-U | 40-10 0046 | 4-Pipe system | 1 TI, 2 AO |

Accessories

| | | |
|--------------|------------|--|
| S-Tn10-2 | 40-20 0001 | Flying lead sensor with 2 m cable |
| SD-Tn10-12-2 | 40-20 0002 | Flying lead duct sensor 12cm immersion depth, 2m cable |
| SD-Tn10-20-2 | 40-20 0003 | Flying lead duct sensor 20cm immersion depth, 2m cable |
| SDB-Tn10-12 | 40-20 0051 | Duct sensor with housing, 12cm immersion depth |
| SDB-Tn10-20 | 40-20 0004 | Duct sensor with housing, 20cm immersion depth |
| SOA-Tn10 | 40-20 0006 | Outdoor sensor |

Selection of actuators and sensors

Use only our approved NTC sensors to achieve maximum accuracy. Recommended is SDB-Tn10-20 as Duct sensor, SRA-Tn10 as Room sensor and SDB-Tn10-20 with AMI-S10 as immersion sensor.

Modulating Actuators:

Choose actuators with an input signal type of 0-10V DC or 2-10V DC.


Mounting location

- On an easy accessible interior wall, approx. 1.5 m (4.5') above the floor in an area of average temperature.
- Avoid exposure to direct sunlight or other heat sources, e.g. the area above radiators and heat emitting electrical equipment.
- Avoid locations behind doors, outside walls and below or above air discharge grills and diffusers.
- Location of mounting is less critical if external temperature sensors are used

Installation

1. Connect the wires to be connected to the terminals of the power case according to wiring diagram
2. Install the mounting plate to the flush mounting box. Make sure that the nipple with the front holding screw is facing to the ground. Make sure the mounting screw heads do not stand out more than 5 mm (0.2") off the surface of the mounting plate.
3. Ensure that the jumpers are set correctly.
4. Slide the two latches located on the top of the front part into the hooks at the upper side of the mounting plate.
5. Carefully lower the front part until the interconnector reaches the mounting-plate. Continue pressing in a gentle way until the front part is fully connected. While inserting the connectors, a slight resistance can be felt. This is normal. Do not use excessive force!
6. With a Philips-type screw driver of size #2, carefully tighten the front holding screw to secure the front part to the mounting plate. This screw is located on the front lower side of the unit. There is no need to tighten the screw too much.

Display and operation

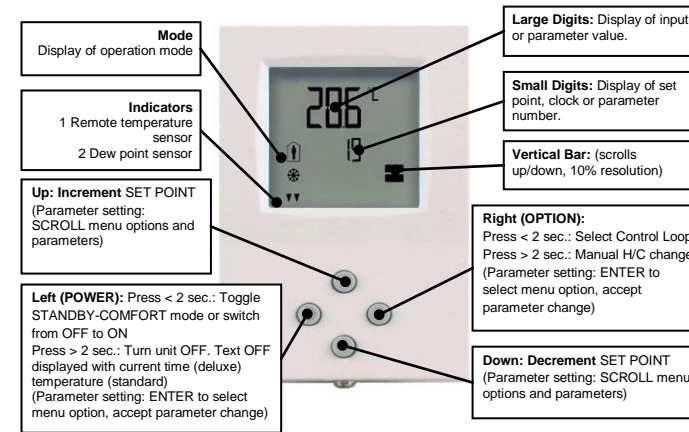


Power failure

Upon power-interruption, all parameters and set points are memorized in non-volatile memory and therefore do not have to be re-entered again.


Error messages

Err1: The connection to the temperature sensor may be interrupted or the temperature sensor is damaged. The output is switched off. Verify parameter settings and wiring.

Technical specification

| | | |
|----------------|--|--|
| Power Supply | Operating Voltage Power Consumption Electrical Connection | 24 V AC/DC $\pm 10\%$, 50/60 Hz, Class 2 48VA max Max. 1.5 VA Terminal Connectors, wire 0.34...2.5 mm ² (AWG 24...12) |
| Signal inputs | Temperature Input Range Accuracy | 0...50 °C (32...122 °F) 0.5 K |
| Signal outputs | Analog Outputs Output Signal Resolution Maximum Load | AO1, For TCY-MT4 AO2 DC 0...10 V 9.76 mV (10 bit) 10 mA |
| Environment | Operation Climatic Conditions Temperature Humidity | To IEC 721-3-3 class 3 K5 0...50 °C (32...122 °F) <95 % r.H. non-condensing |
| | Transport & Storage Climatic Conditions Temperature Humidity Mechanical Conditions | To IEC 721-3-2 and IEC 721-3-1 class 3 K3 and class 1 K3 -25...70 °C (-13...158 °F) <95 % r.H. non-condensing class 2MT2 |
| Standards |  conform according to EMC Standard 89/336/EEC EMEI Standard 73/23/EEC | EN 61 000-6-1/ EN 61 000-6-3 |
| | Product standards Automatic electrical controls for household and similar use Special requirement on temperature dependent controls | EN 60 730 –1 EN 60 730 – 2 – 9 |
| | Degree of Protection | IP30 to EN 60529 |
| | Safety Class | III (IEC 60536) |
| Housing | Cover, back part Mounting Plate | Fire proof ABS plastic (UL94 class V-0) Galvanized Steel |
| General | Dimensions (H x W x D) | Front part: 112 x 73 x 15 mm (4.4" x 2.9" x 0.6") Power case: \varnothing 58 x 32 mm (\varnothing 2.3" x 1.3") |
| | Weight (including package) | 270 g (9.5 oz) |

Wiring diagram

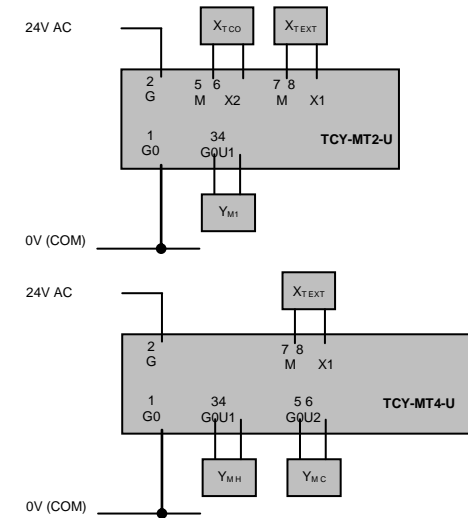

Description:

| | | |
|-----------|-----------------------------|--|
| G0 | Power supply: | 0V, -24VDC, internally connected to signal common |
| G | Power supply: | 24VAC, +24VDC |
| M | Signal common: | Common 0 potential for analog inputs and analog outputs. |
| X1 | External temperature input: | NTC 10k Ω @ 25°C (77°F) |


TCY-MT2:

| | | |
|-----------|-------------------|--------------------------------|
| X2 | Changeover input: | NTC 10k Ω @ 25°C (77°F) |
| U1 | Analog output: | 0...10 V DC |

TCY-MT4:

| | | |
|-----------|------------------------|-------------|
| U1 | Analog heating output: | 0...10 V DC |
| U2 | Analog cooling output: | 0...10 V DC |

Dimensions [mm] (in)

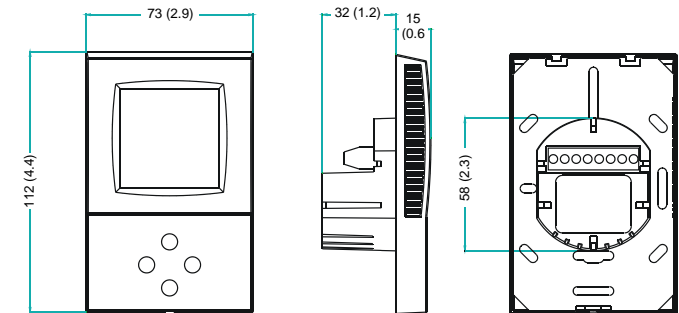

Configuration parameters for firmware version 1.2

The TCY-MT-U is preset to work for most applications. For special requirements it can be fine tuned to work ideal with a simple parameter setup routine. The parameters can be changed on the unit without the need of additional equipment.

Identifying the firmware version

The parameters and functionality of controller depend on its firmware version and revision. It is therefore important to use a matching product version and parameter set. The Firmware version and revision version can be found when pressing simultaneously the ▲ and ▼ keys during several seconds. On the upper 7 segment display, the firmware version can be found, on the lower 7 segment display the current revision index (or "sub-version").

Setting of user parameters

The TCY-MT-U can be adapted to fit perfectly into your application. The control operation is defined by parameters. The parameters are set during operation by using the control buttons. The parameters may only be accessed by entering a code. There are two levels of parameters: User operation parameters for access control settings, and Expert parameters for control functions and unit setup. The codes for user levels and expert levels are different. Only control experts should be given the control parameter code.

The parameters can be changed as follows:

- Press UP and DOWN button simultaneously for three seconds. The display shows the software version in the large digits and the product code in the small digits.
- Pressing the OPTION button will indicate CODE on the small digits and 000 on the large digits.
- The code for accessing the user parameters is 009
- Select this using UP or DOWN buttons.
- Press OPTION button after selecting the correct code.
- Once logged in, the parameter is displayed immediately.
- Select the parameters with the UP/DOWN buttons. Change a parameter by pressing the OPTION button. Three triangles will show up on the lower right and indicate that the parameter may be modified now. Use UP or DOWN buttons to adjust the value.
- After you are done, press OPTION or POWER in order to return to the parameter selection level.

Press the POWER button again so as to leave the menu. The unit will return to normal operation if no button is pressed for more than 5 minutes.

User parameters (Password 09)

| Parameter | Description | Range | Default |
|-----------|---|----------|--|
| UP 00 | Enable access to operation modes | ON, OFF | ON |
| UP 01 | Enable access to set points | ON, OFF | ON |
| UP 02 | Not used | ON, OFF | OFF |
| UP 03 | Enable manual change of Heating/Cooling Mode. No influence on TCY-MT2-U-W01 (cooling only) or TCY-MT2-U-W02 (heating only) | ON, OFF | TCY-MT2-W01: OFF TCY-MT2-W02: OFF TCY-MT2: ON TCY-MT4: ON |
| UP 04 | Not used | ON, OFF | OFF |
| UP 05 | State after power failure: 0 = off, 1 = on, 2 = state before power failure | 0, 1, 2 | 2 |
| UP 06 | Enable Economy (unoccupied) Mode. Shift the set point to a lower temperature in winter or higher temperature in summer in order to save energy. May be activated through the POWER button, or with the external input (typically for key card switches in hotel rooms or motion detectors for meeting rooms.) | ON, OFF | ON |
| UP 07 | ON = Fahrenheit, OFF = Celsius | ON, OFF | OFF (Celsius) |
| UP 08 | Calibrate internal temperature sensor -10° to +10° in 0.1° steps. (Sensor is factory calibrated; use this feature for field adjustment only as required.) | -10...10 | 0 |
| UP 09 | Enable Frost Protection. Activates the output independent of operation mode when the control temperature drops below 5°C or 41°F. The controller returns to normal operation when the temperature increases above 10°C or 50°F. | ON, OFF | TCY-MT2-W01: OFF TCY-MT2-W02: ON TCY-MT2: ON TCY-MT4: ON |

Control parameters (Access code: 241)

Warning! Only experts should change these settings! See user parameters for login procedure.

| Parameter | Description | Range | Default |
|-------------------------------|--|----------------------------------|--|
| CP 00 | Minimum set point limit in Heating mode | 0...60°C (32..160°F) | 16°C (61°F) |
| CP 01 | Maximum set point limit in Heating mode | 0...60°C (32..160°F) | 30°C (86°F) |
| CP 02 | Minimum set point limit in Cooling mode | 0...60°C (32..160°F) | 18°C (65°F) |
| CP 03 | Maximum set point limit in Cooling mode | 0...60°C (32..160°F) | 30°C (86°F) |
| Controls configuration | | | |
| CP 04 | Economy (unoccupied) Mode temperature shift: The comfort (occupied) set point is shifted by the value set with parameter. If heating is active the comfort set point will be decreased, if cooling is active, the set point will be increased. (Enable with UP06.) | 0...100°C (200°F) | 5.0°C (10°F) |
| CP 05 | Dead Zone Span (TCY-MT4-U only): The Dead Zone Span lies between the heating and the cooling set point. The output is off while the temperature is within the dead zone span. A negative dead zone is not possible. | 0...100°C (200°F) | 1.0°C (2°F) |
| CP 06 | Heat/Cool Changeover Delay (TCY-MT4-U only): A demand to switch between heating and cooling must persist for the length of time set with this parameter before the controller switches. Prevents activation of a sequence during a short-term change in temperature in order to protect equipment (with control overshoot for example) | 0...255 min | 5 min |
| CP 07 | P-band heating X _{PH} | 0...100°C (200°F) | 2.0°C (4.0°F) |
| CP 08 | P-band cooling X _{PC} | 0...100°C (200°F) | 2.0°C (4.0°F) |
| CP 09 | K _{int} Integral gain heating, in 0.1 steps, (TI is fixed to 4s) 0 disables ID part low value = slow reaction high value = fast reaction | 0...25.5 | 0.0 |
| CP 10 | K _C Integral gain cooling, in 0.1 steps, 0 disables I part | 0...25.5 | 0.0 |
| CP 11 | Configuration of operation mode 0 = TCY-MT2-U-W01 = Cooling mode Y _{C1} 1 = TCY-MT2-U-W02 = Heating mode: Y _{H1} 2 = TCY-MT2-U = Heating and Cooling (2 pipe system) 3 = TCY-MT4-U = Heating and Cooling (4 pipe system) | TCY-MT2: 0 - 2 TCY-MT4: 0 - 3 | TCY-MT2-W01: 0 TCY-MT2-W02: 1 TCY-MT2: 2 TCY-MT4: 3 |

→ Proportional control (P-band)

The proportional control function calculates the output based on the difference between set point and measured value. The proportional band (P-band) defines the difference between set point and measured value which will result in a 100% output. For example, with a heating or reverse 0-10v control sequence, and a 2.0°C (4.0°F) P-band value, at 10v the controller will be 2.0°C (4.0°F) below set point. This is the working range of the proportional control sequence. Setting the proportional band to 0 disables proportional control.

→ Integral and differential control

Proportional control is a very stable control mode. The flaw of proportional control alone, however, is that the set point is normally not reached. As the measured value gets closer to the set point, the output reduces until it reaches a point, a fraction above or below the set point, where the output equals the load. To reach the set point and achieve a higher level in comfort the Integral/Differential function should be activated.

Integral Gain (KI) dynamically increases the output by the selected KI value until the set point is reached. The challenge, however, is to prevent hunting, where the output increases too fast, the temperature overshoots the set point, the output goes to 0, the temperature undershoots the set point, and the cycle repeats itself. Hunting may result if the integral gain is too high. Each system is different. It is recommended to start with a KI value of 0.5 for water based systems and 1.0 for air based systems. Reduce this value if the measured value overshoots the set point by more than 1°C (2°F). Increase the value if the output takes too long to reach the set point. Air based systems react faster than water based systems.

Setting the integral gain to 0 disables integral and differential control.

Output configuration

| Parameter | Description | Range | Default |
|-----------|--|-----------|---------|
| CP 12 | Manual Override Mode: Allows manual control of the analog outputs for using the controller as positioned, or during commissioning. | ON, OFF | OFF |
| CP 13 | Min output for AO1 (TCY-MT4-U = heating output) | 0 – 100 % | 20% |
| CP 14 | Max output for AO1 (TCY-MT4-U = heating output) | 0 – 100 % | 100% |
| CP 15 | Min output for AO2 (TCY-MT4-U = cooling output) | 0 – 100 % | 20% |
| CP 16 | Max output for AO2 (TCY-MT4-U = cooling output) | 0 – 100 % | 100% |
| CP 17 | Maximum Output in Economy (unoccupied) Mode Reduces the load on the system when the space is unoccupied. | 0 – 100 % | 50% |

Input configuration

| | | | |
|-------|--|----------------------|-------------|
| CP 18 | Configuration of remote control input (X1) 0 = Control input if temperature sensor connected 1 = Occupation sensor – Comfort / Standby 2 = Remote enable – Comfort / OFF 3 = Keycard function: fixed set point | 0...3 | 0 |
| CP 19 | Activation delay (Minutes) = the time the binary input needs to be open before standby/off mode is activated. | 0...255 min | 5 |
| CP 20 | Fixed set point for key card function in heating mode | 0...60°C (32..160°F) | 17°C (63°F) |
| CP 21 | Fixed set point for key card function in cooling mode | 0...60°C (32..160°F) | 27°C (81°F) |
| CP 22 | For TCY-MT2-U only: Enable Auto changeover | ON, OFF | OFF |
| CP 23 | For TCY-MT2-U only: Auto-changeover limit heating | 0...60°C (32..160°F) | 30°C (86°F) |
| CP 24 | For TCY-MT2-U only: Auto changeover limit cooling | 0...60°C (32..160°F) | 15°C (59°F) |

→ Configuring the function of the external input X1

The external input X1 may be configured for several functions:

| | | |
|----------|---|---|
| CP18 = 0 | External control input | The control input is provided by the external input. The internal input will not be used. |
| CP18 = 1 | Switching Economy and Comfort modes | Economy (unoccupied) and Comfort (occupied) modes are controlled through an external contact by connecting X1 through a dry contact to signal common. This function may be used together with key card switches for hotels or motion detectors for offices. |
| CP18 = 2 | Switching Energy Hold OFF and Comfort modes | Opening the external temperature input will force the unit into the OFF operation mode. The operation mode cannot be overridden by using the terminal. Connecting the binary input to GND returns control of the operation mode to the terminal. This function may be used as window contact to prevent loss of energy. |
| CP18 = 3 | Key card function | As with CP18 = 1, the key card function switches economy (unoccupied) and comfort (occupied) modes. Instead of using the set point shift, the set points in unoccupied mode are defined by parameter CP20 and CP21. |
| CP18 = 4 | Output enable | This may be used for a dew point sensor input. Output will switch off if contact opens. |

→ Configuring auto changeover input X2 (TCY-MT2-U only):

The auto changeover function automatically changes heating and cooling mode based on supply media temperature or outdoor temperature. The difference between the two is in the values of the changeover limits CP23 and CP24. See table below for recommended settings.

Heating and cooling may be as well changed by an open contact switched to signal ground. Note: all signal ground levels of involved controllers must be the same in case more than one controller is switched.

→ Recommended settings for CP23 and CP24:

| Change over mode | Relation CP23 to CP24 | Example CP23 | Example: CP24 |
|--|-----------------------|--------------|---------------|
| Supply media | CP23 > CP24 | 25°C (77F) | 18°C (64F) |
| Outside temperature | CP23 < CP24 | 15°C (59F) | 25°C (77F) |
| Dry contact: Heating if contact closed | CP23 > CP24 | 25°C (77F) | 15°C (59F) |
| Dry contact: Cooling if contact closed | CP23 < CP24 | 15°C (59F) | 25°C (77F) |